

COMFORT CRUISER
ASSEMBLY INSTRUCTIONS AND OWNERS MANUAL



hello, fun...

PEDEGO ELECTRIC BIKES

speeds up to 20 m.p.h. • electric motor • rechargeable battery • pedals like a regular bike

Table of contents

Carton Contents	2
Assembly Instructions	4
Safety	6
Operating Procedures	7
Battery and Charger Care	8
To Recharge the Battery	8
Hand Throttle Control	10
Tires	10
Gears	11
Additional Passengers	11
Keys	12
Brakes	13
Kickstand	14
Appearance Care	14
Commonly Asked Questions	15
Warranty	16
Parts List	18
Warning	19
Insurance Information	19
Your Bike Information/Serial Number	20

Carton contents

1. Comfort Cruiser Bike
2. Pedals (2)
3. Owner's Manual/Assembly Instructions
4. Lithium Ion Battery
5. 2 Keys for Battery/2 Keys for Rear Wheel Lock
6. Tool Kit
7. Battery charger

Welcome to the wonderful world of the electric bike, Pedego.

First of all, we would like to thank you for choosing the Pedego electric bike. We believe this technology, with the benefits of electric propulsion, provides you with the perfect vehicle to increase your personal mobility.

Our gearless, brushless, electric hub motor allows you to run errands or commute to work while saving money on gas and reducing your environmental impact on our world. It also gives you the opportunity to pedal if you want to get exercise along the way.

All this and it is just plain fun to ride!

If you have any concerns, questions or suggestions about the Pedego electric bike, please contact us at support@pedego.com. Again, thanks for choosing Pedego!



PLEASE NOTE:

This manual is not intended as a detailed user, service, repair or maintenance manual. Please seek assistance from qualified technician for service, repairs or maintenance.

assembly instructions

Your bike has been pre-assembled and requires only a few simple steps to get it ready for you to ride:

1. Remove the outside carton after cutting the nylon bands by lifting off the entire box from the tray at the bottom.
2. Remove all the inside cardboard protection and bubble wrap.
3. Please locate the pedals, battery charger and tool kit and set aside.
4. Lift your bike out of the bottom tray and put the kickstand down to hold the bike in place.

5. Insert the handlebars into the header tube on the bicycle. The handlebars can be adjusted for height and alignment by removing the rubber protective cap and loosening the screw (with the allen wrench included in the tool kit) on top of the stem. Make sure handlebars are aligned with the front wheel before tightening.



Do not make any other adjustments to the handlebars. They are factory set for maximum comfort. Other adjustments may cause damage to the handlebar assembly.



6. Seat Adjustment. Make sure the seat stem is clamped tight enough so that you can't twist it out of alignment. Pull seat clamp handle away from seat post and slide seat up or down to adjust. Move clamp handle inward toward seat post so post is held tight by clamp.



Tighten clamp if necessary by twisting the clamp handle clock-wise while in the unclamped position. Then fold handle in toward seat post. This should require a fair amount of force to insure post is held tight.

Make sure seat and handlebar stems are not set with the vertical maximum height marks above clamps.

7. Pedal Installation – PLEASE NOTE – THE PEDALS ARE MARKED “L” for Left and “R” for Right. Using the wrench provided in the tool kit, attach and tighten the pedals. The left pedal is attached by turning it counter clockwise and the right pedal is tightened by turning it clockwise.



8. Plug the cord that comes out from underneath the rear rack into the battery. Turn the key to the “on” position by turning it clockwise.

safety

Helmet:

Always wear an approved helmet when riding your Pedego and follow the helmet manufacturer's instructions for fit, use and care of your helmet. It's your responsibility to familiarize yourself with the laws of the areas where you ride and to comply with all applicable laws.

Mechanical Safety Check:

Routinely check the condition of your bicycle before every ride. Make sure no nuts or bolts are loose. Do a quick visual inspection of the whole Pedego before every ride. Make sure tires are correctly inflated with 40 psi minimum to 60 psi maximum air pressure. Check the brakes for proper operation.

Your First Ride:

When you buckle on your helmet and go for your first ride, be sure to pick an area away from cars, other cyclists, obstacles or other hazards to become familiar with the controls, features and performance of your new Pedego. We suggest you start riding with the electric motor turned off until you are comfortable. Then, push the red button on the right handle to turn the motor on.

operating system

The red button located on the right handle toggles on-off.


You can ride the Pedego as a normal bike by just leaving the switch off.



To be able to use the electric motor, the battery must be mounted by sliding the fully charged battery forward onto the rear rack, over the rear wheel, through the channels on the battery while the carry handle is positioned at the rear. The key switch position must be unlocked to slide battery on.



OFF

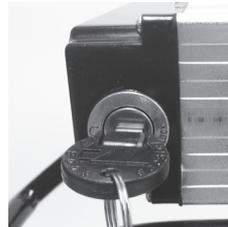

ON

The key switch locks the battery in position when the key is turned clockwise to either OFF or ON.

Plug the power cord to the battery. Turn the key to the on position, then press the red thumb button on the right handlebar grip so that the battery charge indicator lights are lit. Be sure to turn off power when Pedego is not in use or is recharging by pressing the thumb button again. When power is off, the indicator lights will not be lit.

battery and charger care

Included with your new Pedego is a lithium ion battery, along with a charger, which plugs into a standard 110 volt household electric receptacle.



A lithium ion battery requires specially designed chargers. You should never charge your battery with a substitute charger that is not designed for this use. Use of an unsuitable charger to charge a lithium ion battery will result in over-heating, fire or even explosion.

to recharge the battery

The Pedego battery may be charged while on the bike or removed and charged at a location away from the Pedego in a dry location. The battery is easily removed by moving key switch to the unlock position, unplugging the power cord and grasping the handle at the rear of the battery and sliding the battery to the rear of the Pedego.



To charge the battery, plug the charger into an AC outlet. The LED indication light should be green showing the charger is working normally. Then plug the charger into the charging port located on the side of the battery underneath the battery handle. The charger will charge up the battery in 4–6 hours. The indicator light on the

charger will be red when battery is charging and will turn green when fully charged.

Recharge battery after every use or when lights next to throttle control shows a low charge.

Do not open or alter the battery or the battery charger.

Do not place the battery near fire or corrosive substances.

Do not immerse in water or other liquids.

Avoid subjecting the battery to high temperature, such as directly under the hot sun, for prolonged periods of time.

Recharge the battery before it becomes completely discharged. Completely discharging will reduce the numbers of recharging cycles during the battery's life and limit the capacity. Never store the battery in a discharged state.

After much use, your battery's charge holding capacity will decrease. If you find that your battery does not hold sufficient charge even for short trips, you should contact your dealer to order a replacement.

If the battery will not be used for an extended period of time, charge it fully and recharge it every 3 months. Store it in a cool place. Your Pedego battery is engineered with precision for high capacity and a long useful life. Do not use it to power other electrical devices. Improper use of the battery will damage the battery and shorten its useful life, and may cause fire or an explosion. If you experience unusual sounds or odors coming from the charger or the battery, unplug charger immediately and contact Pedego customer service at 1-800-646-8604 or email at **support@pedego.com**.

hand throttle control

The throttle control is operated with the right hand. It is located immediately to the right of the battery charge indicator lights



You control the throttle by twisting it from its resting position, the farther the throttle switch is from its resting position, the more power is delivered to the motor to accelerate the Pedego. When you want to slow down, you simply release the throttle and let it return to its resting position, and simultaneously apply the brakes if necessary.

You do not need to pedal the Pedego if you use the hand throttle. However, you can pedal while commanding power assist. If you do pedal to help the movement, you conserve energy and the charge in the battery will last longer.



tires

The tire tubes contain a chemical substance to reduce the chance of deflation when contacted with a road hazard. Tires should not be deflated unless necessary. A green substance will be discharged from the air valve when deflated. It is not harmful unless it is ingested.

To minimize tire wear and for maximum riding safety, comfort and handling, maintain front and rear tire air pressure between 40 and 60 psi. Use a reliable tire air pressure gauge to check for proper inflation before every ride. At the same time, inspect tires for excessive wear and cracks in sidewall. Replace tires if necessary. Pedego recommends inflating tires with SLIME[®], or purchasing a bicycle tube that contains SLIME[®], which can be purchased at most bicycle supply stores.

gears

Your Pedego is equipped with 6 speeds. First gear is for easier and uphill pedaling. The sixth gear is for maximum speed on level or downhill terrain. Change gears while pedaling. The shift lever is for shifting to a lower gear. The shift button is for shifting to a higher gear. The rear wheel contains six chain sprockets. When the chain is around the largest sprocket, you are in 1st gear, or the lowest gear. High gear, or 6th gear, will have the derailleur positioned so that the chain is directed around the smallest gear.

Every position on the gear selector should cause a gear change. Adjustments require fine tuning and should only be made by a qualified technician.



**DO NOT DISASSEMBLE, MODIFY
OR REPLACE ELECTRICAL PARTS.**

ADDITIONAL PASSENGERS

Pedego Comfort Cruiser Pedegos are designed for one passenger only. DO NOT carry any additional passengers on the front or rear of the bike. The rear carrier is not designed to carry the weight of any additional passengers, including baby carriers.

Keys

Two sets of keys are included with your new Pedego Cruiser. One set of 2 keys is for the battery (refer to Battery section in manual). The other set of keys is for locking the rear wheel as a means of theft deterrent.



Battery Keys



Wheel Lock Keys

There are two different keys for locking the rear wheel. They both fit the lock. The difference is that one has a red button that when pressed activates a light for making it easier to operate the lock in dark surroundings.

The wheel lock is located behind the rear axle. Lift the cover to access the lock.



Lock Cover Closed



Lock Cover Open

To lock the rear wheel, the key is inserted into the lock and turned counter clockwise one half a turn. The key can then be removed. To unlock, the key is inserted into the lock and turned one half a turn clockwise. The key can be removed.

ALWAYS REMOVE THE BRAKE LOCK KEY BEFORE OPERATING.

brakes

Your Pedego Comfort Cruiser is equipped with a front disc brake and a rear hub



brake for maximum reliability. Applying hand pressure to the brake levers will cause the wheel brake to cause friction against the brake disc, slowing the wheel. The more hand pressure applied to the brake lever, the faster the Pedego will come to a stop. The rear brake should always be applied before and while the front brake is applied. Applying only the front

brake to slow or stop at high speeds may result in the rider being ejected from the saddle and continuing forward over the handlebars. It is best to apply even pressure to both brake levers when slowing or stopping.

Bicycles equipped with disc brakes will occasionally make a slight scraping noise when the wheels are turning without the brakes being applied. This is normal. The rear hub brake will occasionally need grease. If the rear brake makes noise, just add a moly graphite type of grease to the brake by removing the phillips head screw on the top of the brake, squeeze in a small portion of grease and return the screw back to its' place.



We recommend using the STA-Lube Engine Assembly Lube (Part #SL3333) that can be found in most auto part stores. Let the grease work its way in by riding a short distance.

Insure that the brake lever does not contact the handlebar when full hand pressure is applied. If so, then the brakes must be adjusted by increasing the tension on the cable.



A quick and small adjustment may be made by unscrewing the threaded adjuster at the hand lever until the brake is tightened sufficiently for safe stopping.

Kickstand



DOWN POSITION

The motorcycle style kickstand has two legs that are designed to expand as the kickstand is put in the down position and contract as it goes into the up position.

The height of the right leg can be adjusted by turning the lower part of the leg 1/4 turn clockwise, moving it up or down and then releasing it back to its original position. If your Pedego is not level, simply adjust the leg to match the other.

Please do not sit on your Pedego with the kickstand in the down position

appearance care

Periodically clean your Pedego electric bike with a damp cloth. Avoid spraying the Pedego with a water hose to avoid electrical issues.

Store your Pedego in a dry shelter area away from direct sunlight and wet or damp environment.

electric bikes FAQs

Q. How long does it take to fully charge the battery?

A. Depends on the state of discharge but not more than 4 hours if completely discharged.

Q. What are the running costs for a Pedego electric bike?

A. You will have no worries about rising fuel prices at the pumps. All our electrically powered vehicles use household electricity. The average cost per full charge is about 10 cents per charge. If you charged the battery every single day for a year, it would cost you about \$35 per year.

Q. Can I ride up hills and against strong headwinds on my Pedego electric bike?

A. Yes. One of the main advantages of cycling on a Pedego electrical bicycle is that it literally flattens hills and increases your average speed when tackling inclines and headwinds. If you provide a reasonable amount of effort, but you should be able to tackle anything from a 1 in 10 (10%) gradient up to a 1 in 7 (14%) gradient. You will be amazed at the relative ease that your new Pedego electric bike can tackle some of the most arduous journeys.

Q. Do I need a driving license, insurance or registration?

A. No, you don't. According to Federal law, electric bikes that are under 750 watts are classified as bicycles. For all intensive purposes, it's simply a bicycle that requires very little pedaling to travel 20 mph, saving you time and hassle. The law does require the use of helmet and riders to be at least 16 years old. Check your local state laws for requirements.

Q. Do I need to pedal an electric bike?

A. No but it helps to prolong battery life. The motor on our bikes is throttle controlled, allowing you to decide how much power you desire. Have you ever tried to cycle when speeding downhill on your normal bicycle? It's just like that. The motor is propelling you faster than you're cycling so there is pretty much no resistance, it's merely a formality!

Q. What happens when I use the brakes under powered assistance?

A. All our bikes are equipped with brake levers that have a built in safety switch that automatically cuts off the motor power under normal braking conditions. This not only ensures a safe un-powered stopping feature, but also protects the motor under braking conditions so that it isn't working against the brakes.

Q. How far will a Pedego take me?

A. This all depends on a few factors. Cycling with pedal assist along a straight road under normal conditions, the battery should last about 15-30 miles. Cycling up steep hills will obviously take more energy out of the battery and factors such as road surface, wind resistance, weight of the rider and tire pressure will affect your range

Q. What happens if I get a flat tire?

A. The tires on our bikes are the same as conventional bicycles. Simply replace the tube with a tube of the right size and inflate it. No special tires or parts will be needed.

Q. How do I know when the battery is low?

A. The bicycles have easily visible light indicators located on the handle bars that show the amount of juice left. If it is getting low and you don't think you will make it to your destination, you can switch off your motor and keep it just for the difficult bits.

Q. Do I have to wait for the battery to empty before I charge it?

A. No. The batteries we use are Lithium-ion batteries which do not suffer from 'memory effect'. This means that there is no need to discharge a battery completely before you recharge it again. You can partially recharge the battery at any time without reducing its voltage or lifespan. We recommend recharging the battery after every use, regardless of how far you rode.

Q. Can I put a child's trailer on a Pedego?

A. Yes, you can certainly add a trailer to your Pedego. We suggest using one that hooks onto the frame rather than the axle.

Q. Can I put a Pedego on a bike rack?

A. Yes, just make sure that the bike rack can hold a 60 pound bike. We also suggest taking the battery off to make it easier to lift.

ONE YEAR LIMITED WARRANTY BICYCLE COMPONENTS

PEDEGO, LLC ("PEDEGO") warrants that all new PEDEGO Electric Bikes ("Bikes") and components therein are warranted to the original retail purchaser ("Purchaser") against manufacturing defects in materials and/or workmanship for a period of one (1) year from the date of original retail purchase.

TERMS OF LIMITED WARRANTY

This warranty becomes effective on the date of original retail purchase. This warranty is not meant to suggest or imply that the Bikes cannot be broken or will last forever. It does mean that the Bicycle is covered subject to the terms of the warranty. This warranty applies only to the original Purchaser of a Bicycle and is not transferable to subsequent owners or any other party. This warranty is void if the Bicycle is subjected to abuse, neglect, improper repair, improper maintenance, alteration, modification, an accident or other abnormal, excessive, or improper use, at the sole discretion of PEDEGO. During the duration of this warranty, PEDEGO, at their cost, will either repair the Bicycle or Bicycle component(s), or at PEDEGO' sole discretion, will replace any defective Bicycle or component(s) with the same or equivalent component(s). The foregoing warranties are in lieu of and exclude all other warranties not expressly set forth herein, whether express or implied by operation of law or otherwise, including, but not limited to any warranties of merchantability or fitness for a particular purpose. In no event shall PEDEGO be liable for incidental, consequential or punitive damages arising from use or unavailability of the Bicycle or component(s) in any manner, including, without limitation, damages for personal injury, property damage, or economic losses, whether based on contract, warranty, negligence, product liability, or any other theory. PEDEGO' liability hereunder is expressly limited to the repair or replacement of Bikes or component(s), or at PEDEGO' sole discretion, to the net amount paid by the original retail purchaser. If the original retail Purchaser elects to repair a defective Bicycle or component(s) himself or use the services of someone other than PEDEGO (or its designee) to repair the Bicycle, or if Purchaser uses a replacement part not authorized by PEDEGO, PEDEGO will not be liable for any damage, failure or loss caused by the use of such unauthorized service or parts. If the Purchaser has a valid warranty claim as set forth in the Procedures and Terms and Conditions (the "PTC"), this limited warranty includes the cost of shipment or transportation of the Bicycle or Bicycle component(s) to or from PEDEGO in accordance with the PTC. If the Purchaser does not have a valid warranty claim as set forth in the PTC, this limited warranty does not include such shipment or transportation costs.

EXCLUSIONS:

This warranty does not cover:

- normal wear and tear;
- damage or failure from abuse, neglect, misuse, or accident;
- damage from stunt riding, ramp jumping, acrobatics, or similar activities or any activity that is not consistent with the intended use of the Bicycle;
- damages resulting from failure to follow Instructions for Use and Warnings as provided in the Owner's Manual for the Bicycle;
- damages resulting from improper charging of the battery pack or use of any charger not supplied by PEDEGO;
- installation of any parts, accessories, or electrical component(s) not originally intended for or compatible with the Bicycle as sold, or any modification of the frame or any component(s) originally supplied; tires, brake pads, chains, lights, motors, battery packs, displays, or vehicle controllers that have been opened for any purpose whatsoever, other than by PEDEGO or its authorized agents; and the purchase or use of the Bicycle outside of the United States of America.

All warranties are void if the Bicycle is used for any purpose other than the reasonable intended use of the Bicycle. Additionally, this warranty does not cover damage associated with commercial use.

PROCEDURES:

Warranty work must be performed by PEDEGO or an authorized agent of PEDEGO. Proof of purchase must be provided. To qualify for warranty services, a Warranty Product Return Authorization Number ("WPRAN") must be obtained by the original retail purchaser from PEDEGO. The original retail Purchaser must contact an PEDEGO representative to discuss the problem with the Bicycle and to obtain a WPRAN. Upon issuance of a WPRAN, the Bicycle or Bicycle component(s) must be returned to PEDEGO at its designated location for warranty work. The original retail Purchaser is responsible for the return of the Bicycle, undamaged in transit, to PEDEGO for warranty work and for the costs associated with shipping and insuring the Bicycle and component(s) when returning them. If PEDEGO' authorized qualified technicians determine a warranty claim is valid and conforms with this warranty, PEDEGO will repair or replace component(s) or replace the entire Bicycle at PEDEGO' cost, including materials and labor. For valid warranty claims hereunder, PEDEGO will reimburse the original retail Purchaser for shipping and insurance costs incurred as a result of returning the Bicycle to PEDEGO for warranty work at standard ground shipping rates, and PEDEGO will pay for shipping costs to return the Bicycle to the original retail Purchaser.

THREE YEAR LIMITED WARRANTY BATTERY

PEDEGO ELECTRIC BIKES warrants to the original purchaser that the battery is free of defects in material and workmanship for 36 Months. The warranty period for a battery is calculated from the original battery purchase date. The original receipt of purchase is required to establish proof of purchase and warranty date, and must be provided to Pedego for all warranty claims.

The warranty for replacement batteries will be based on the original battery purchase date, as identified on the original battery purchase sale receipt. Under no circumstance will a replacement battery have a warranty date different than the original battery purchase date. If a replacement is necessary due to a defect in materials and/or workmanship, then upon return to PEDEGO ELECTRIC BIKES: The battery will be replaced free of charge, within the free replacement period from date of original purchase for one year. After 1 year, we will contact you with the pro-rated cost, asking for your credit card before making shipment of a pro-rata battery pack. Please supply a daytime phone number. The pro-rata cost will be based on the list price at the time of replacement. Shipping costs are additional.

The original battery sale receipt must be maintained for any further claims. All replacement batteries will be warranted for the balance of the original warranty period.

PEDEGO ELECTRIC BIKES will have no obligation under this limited warranty in the event the battery is damaged or destroyed as a result of any of the following events: use on a non Pedego bike, damage or destruction by abusive overcharging; collision; theft; improper maintenance or mishandling of the battery; natural forces such as wind, lightning, hail, etc.; any willful or negligent act; penetration, or opening of the battery case in any manner.

Replacement will be honored only by PEDEGO ELECTRIC BIKES. You are responsible for paying all of the following costs associated with the replacement: labor for removal or installation; applicable taxes; and any shipping or transportation costs incurred in returning the battery to PEDEGO ELECTRIC BIKES for evaluation.

THIS IS PEDEGO ELECTRIC BIKES'S EXCLUSIVE WARRANTY. NO PARTY IS GRANTED EXPRESS OR IMPLIED AUTHORITY TO CHANGE OR ANNUL THIS WARRANTY IN ANY MANNER. IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. PEDEGO ELECTRIC BIKES DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

If you purchase your battery in a state/province that disallows limitations on implied warranty, or exclusion or limitation of special, incidental or consequential damages, the limitation and exclusions stated above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province. This warranty is extended to the only to the original retail purchaser.

LIMITATIONS ON GUARANTEE WARRANTY

THE ABOVE GUARANTEE IS THE ONLY REMEDY PROVIDED BY PEDEGO ELECTRIC BIKES TO ITS RETAIL CUSTOMERS. THIS IS PEDEGO ELECTRIC BIKES'S EXCLUSIVE WARRANTY. NO PARTY HAS EXPRESS OR IMPLIED AUTHORITY TO CHANGE OR ANNUL THIS WARRANTY IN ANY MANNER. IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. PEDEGO ELECTRIC BIKES DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

CONSUMER RIGHTS:

This limited warranty gives the consumer specific legal rights. The consumer may also have other legal rights which vary from state to state or country to country. Some states and countries do not allow the exclusion or limitation of incidental or consequential damages or warranties, so some of the above limitations or exclusions may not apply to you. If it is determined by a court of competent jurisdiction that a certain provision of this limited warranty does not apply, such determination shall not affect any other provision of this limited warranty and all other provisions shall remain in effect.

replacement parts list

C001	Tire K905 26*2.30	PC
C002	F&R Rim	Set
C003	Front Hub	PC
C004	Front Disc Brake (Including rotor + pad)	Set
C005	SHIMANO 6 gears	Set
C006	Handlebar	PC
C007	Adjustable Stem	PC
C008	Throttle	PC
C009	Brake Lever	Set
C010	Central Axle	PC
C011	Chain Wheel & Crank	Set
C012	Pedals	Set
C013	Kick Stand	PC
C014	Seat Post	PC
C015	Quick Release Seat Holder	PC
C016	F & R Brake Wire	Set
C017	Bell	PC
C018	Shifter Wire	PC
C019	Kettle Lead (Power Wire)	PC
C020	Wheel Reflector	Set
C021	Front Reflector	PC
C022	Rear Reflector	PC
C023	Tool Kit	Set
C024	Front Axle & Motor Axle Cover	Set
C025	Front Wheel Spoke (12G)	Set
C026	Rear Wheel Spoke (12G)	Set
C027	Chain (SHIMANO)	Set
C028	Cable Wrap	Set
C029	Extrusion Plate	PC
C030	Bolts & Nuts	Set
C032	Touch up paint	PC
C033	Rear motor assembly black motor	Set
C034	Rear motor assembly alloy motor	Set
C035	Front Fork	PC
C036	Headset	Set
C037	Stem Washer	PC
C038	500W Motor	PC
C039	Controller	PC
C040	Charger (UL Certificate)	PC
C041	36V Type Li-Ion batteries pack	Set

warning:

Electric Bikes can be dangerous to use. The user or consumer assumes all risk of personal injuries, damage, or failure of the Bicycle or system and all other losses or damages to himself and others and to any property arising as a result of using the Bicycle.

For technical or warranty assistance
please contact **Pedego** at **949-336-8333**.

For replacement parts, contact Pedego at **support@pedego.com**.

YOUR INSURANCE POLICIES MAY NOT PROVIDE COVERAGE FOR ACCIDENTS INVOLVING
THE USE OF THIS BICYCLE. TO DETERMINE IF COVERAGE IS PROVIDED, YOU SHOULD
CONTACT YOUR INSURANCE COMPANY OR AGENT.

**SERIAL NUMBER IS ENGRAVED
UNDERNEATH THE FRONT CRANK
OF YOUR PEDEGO.**



recording your pedego info

SERIAL NUMBER: _____

MODEL: _____

COLOR: _____

DATE OF PURCHASE: _____

DEALER'S NAME: _____

DEALER'S PH#: _____

DEALER'S EMAIL: _____

PLEASE REGISTER YOUR PEDEGO AT WWW.PEDEGO.COM



classic

BALLOON UPGRADE

	WHITE WALL	CREME	BROWN	BLACK
BLACK - BLACK				
BLACK - LIME GREEN				
BLACK - RED				
MIDNIGHT BLUE - BLUE				
BURGUNDY - BLACK				
ORANGE - ORANGE				
SILVER - BLACK				
WHITE - RED				
OLIVE GREEN - GREEN				

interceptor

AVAILABLE IN CLASSIC AND STEP-THRU

CREME	BROWN	BLACK	CREME	BROWN	BLACK	CREME	BROWN	BLACK
WHITE			BLACK			RED		



step-thru

BLACK - BLACK
(AVAILABLE IN 24 INCH
WITH WHITE WALLS)

BLUSHING BLUE - BLUE

EMERALD GREEN - GREEN
(AVAILABLE IN 24 INCH
WITH WHITE WALLS)

ORANGE - ORANGE

ORCHID PURPLE - PURPLE

PRETTY IN PINK - PINK

RUBY RED - RED
(AVAILABLE IN 24 INCH
WITH WHITE WALLS)

WHITE - MINT GREEN
(AVAILABLE IN 24 INCH
WITH WHITE WALLS)

WHITE - PINK

MIDNIGHT BLUE - BLUE

CANARY YELLOW - YELLOW

OLIVE GREEN - GREEN

BALLOON UPGRADE

WHITE WALL

CREME

BROWN

BLACK





1751 LANGLEY AVE. IRVINE, CA 92614

www.pedego.com

949-336-8333

VER 4.4